

Operation Manual Model: 9690





Please read this manual before operating

9690 Massage Chair®, Gulfstream Inc.® are trademarks of Gulfstream Inc.

Patent #D709619, #8726430, #8680699, #D701318, #8662848, #8531048, #8366418, #D670938, #D670354, #D662340, #D660444, #D650084, #D646082, #D636090, #D632798, #D628704, #D615326, #D613099, #D612509, #D610697, #D600950, #D596883, #D596882, #D590188, #D590188, #D589285, #D588844, #D583960, #D583576, #D583171, #D565739, #D556480, #7111334, #6991182

■ TrueTouch® Massage Chair and Gulfstream Inc



Welcome to True Touch® Massage Chair

True Touch® chairs are the perfect bridge between state-of-the-art technology and the ancient, healing art of massage. True Touch® massage chairs utilize trademarked Gulfstream Inc. massage technology. This patented shiatsu system emulates the back and spinal care techniques used by massage and chiropractic professionals.

To ensure that you use this chair safely and properly; please read this manual, in its entirety, before beginning usage.

About Gulfstream Inc.

Based in North America, Gulfstream Inc. is a leader in salon/spa equipment and furniture. Gulfstream's success is attributed to innovation and cutting edge products. Superior craftsmanship and ingenious design has led to some of the industry's most luxurious products. From custom color glass bowls for pedicure spas, to environmentally friendly, ultra hygienic poly liners for their pedicure bowls, Gulfstream Inc. leads the way for the salon/spa industry. On-site production enables Gulfstream Inc. to continually upgrade their products, thus ensuring that their customers receive the latest designs and technology. Gulfstream Inc. is committed to meeting the evolving needs of the worldwide salon/spa market. Gulfstream sets the trends that others follow.

For more details and information about Gulfstream Inc. please visit our website at www.gulfstreaminc.com or call our service centre at 1-877-622-4853.



Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our company reserves the right to change and explain the design of the product. If there is some difference between the product function in market circulation and the description in the manual, it is a normal update of the product, and our company will not inform you otherwise. The specific product function and color shall prevail in kind.

CONTENTS

Important safety instructions	02
Name and function of components	06
Function	07
Method of usage	08
Product specification	14

Important Safety Instructions



Warning: \triangle

This product can expose you to chemicals including lead which are known to the State of California to cause cancer or birth defects or other reproductive harms. For more information go to www. P65Warnings.ca.gov/furniture.

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using (this appliance)

DANGER-To reduce the risk of electric shock:

1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING-To reduce the risk of burns, fire, electric shock, or injury to Persons:

- An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- Do not operate under blanket or pillow. Excessive heating can occur and Cause fire, electric shock, or injury to persons.
- Close supervision is necessary when this appliance is used by, on,or near children, invalids, or disabled persons.
- 4) Use the appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.
- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.

Safety and Maintenance



- 13) The appliance is intended for household and indoor use only.
- 14) Connect this appliance to a properly grounded outlet only ,see grounding instructions.
- 15) Keep children away from extended foot support (or other similar parts)
- 16) Do not use massager in close proximity to loose clothing or jewelry.
- 17) Keep long hair away from massager while in use.
- 18) Connect this appliance to properly grounded outlet only. See Grounding Instructions.
- 19) Donot use massager inclose proximity to loose clothing or jewelry.
- 20) Keep long hair away from massager while in use.

WARNING: Risk of personal injury - do not use the pedicure chair when the back cushion is not in place.

SAVE THESE INSTRUCTIONS GROUNDING INSTRUCTIONS

This product must be grounded ,if it should malfunction or breakdown ,grounding provides a path of least resistance for electric current to reduce the risk of electric shock ,this product is equipped with a cord having an equipment grounding conductor and a grounding plug ,the plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER

:Improper connection of the equipment grounding conductor can result in a risk of electric shock ,check with a qualified electrician or serviceman of you are in doubt as to whether the product is properly grounded ,do not modify the plug provided with the product-if it will not fit the outlet,have a proper outlet installed by a qualified electrician.

1)This product is for use on nominal 120-volt circuit,and has a grounding plug that looks like the plug illustrated in sketch on the page 16 ,A temporary adapter that looks like the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available the temporary adapter should be used only until a properly grounded outlet (shetch A)can be installed by a qualified electrician ,the green colored rigid ear ,lug ,or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover ,Whenever the adapter is used ,it must be held in place by a metal screw .

Name and Function of Components



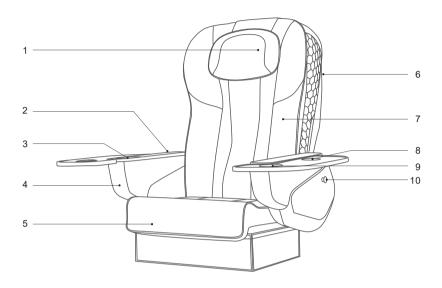

- 1. Detachable Head Pillow Pad
- 2. Dual USB charging port
- 3. Controller
- 4. Armrest up & down for easy access
- 5. Detachable Seat cushion
- 6. The back covering
- 7. Backrest
- 8. Wireless charging spot
- 9. Cup holder
- 10. Purse hanger

Function




Function

- Designed with a four-wheel driven muted massage mechanism which can move up and down in the backrest.
- Seat frame forward and backward movement, backrest reclining and declining movement.
- With the bathtub shortcut button to adjust the bathtub forward or backward and the backrest angle to tilt freely.
- · Restoring the massage hands after turning off the machine.
- · Design with USB & Type-C Port .

Solution of an ordinary malfunction

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the Thermal protector will activate the product automatically shut down power,it should be used again after half an hour's rest.



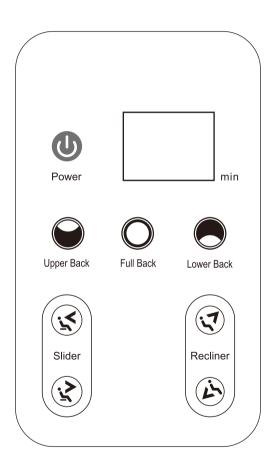



1.Controller operate

Button	Adjust massage balls		
	To start or stop massage of the upper body		
Upper Back	The massage device mainly automatically covers your neck or shoulder		
Full Back	The massage device works with various techniques at different body zone of your upper body.		
Lower Back	The massage device mainly automatically covers your back and waist		


(3) Adjust angle of backrest andfootrest

Button	Function	Display status
Seat	<i>i</i> \$	Press this button continually and the seat frame will move forward,loose your finger and the movement will stop.
	<u>'</u> <	Press this button continually and the seat frame will move backward,loose your finger and the movement will stop.
Back	丛	Press this button continually and the backrest frame will move downward,loose your finger and the mocement will stop.
	Z	Press this button continually and the backrest frame willmove upward,loose your finger and the movement will stop.



2.Components install direction


- Place the bottom frame of massage chair on the spa tub.
- Make sure the holes of the bottom frame are aligned with the pre-drilled holes on the spa tub.
- Secure the massage chair onto spa tub by using provided hardware as shown in the diagram below.

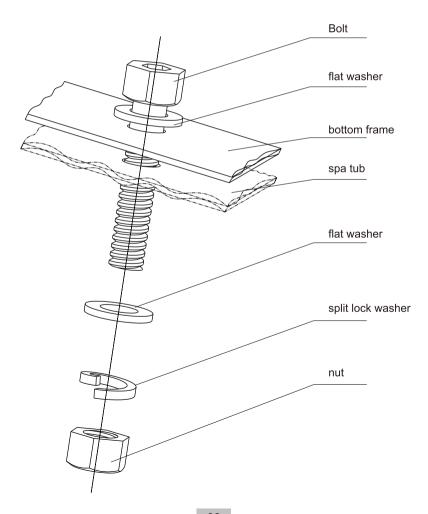




3.Tray Installation

- 1.Align the mounting holes of hinges and hinges on the coffee table board with the fixed holes on the handrail;
- 2. Fix it on the handrail with M4*12 screws (total 8 screws fixed).

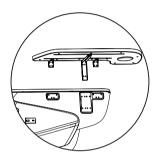

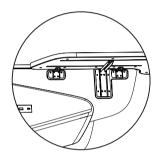

Caution

- (1). The correct method of operation: before operating the controller, please make sure that the backrest electronic cylinder is connected well with the pin that fixes the backrest.
- (2). When the backrest electric cylinder is not connected with the pin that fixes the backrest, please hold the electronic cylinder in case it touches the ground when operate the controller.
- (3). When debugging and installation, before operating the controller, please make sure that the backrest electric cylinder is connected well with the pin that fixes the backrest. Otherwise, after shutting down the switch, the front part of the electronic cylinder will hit the board under the seat frame to cause bad distortion of the seat frame, and even make the rail go out of the railway or damage the steel-ball railway.









Operation sequence

SWITCH ON POWER

- (1).insert the plug into the socket outlet.
- (2).switch on the power button behind the armrest.



MASSAGE

(1)Select relative massage according to the operation instructions of the control.



POWER

SWITCH OFF POWER


- (1).stop overall massage.
- (2).switch off the power button behind the armrest.
- (3).pull the plug out of the socket outlet.



Attaching or detaching the pillow pad and b ack cushion

The pillow pad and back cushion (recommended) reduces the kneading intensity of your neck and shoulder, but you can decide to put it on or not according to your personal need.(1)Zipper connects the back cushion.(2). Sticker connects the pillow pad and back cushion.

WARNING: IN CASE OF DANGER, DO NOT REMOVE THE CUSHION

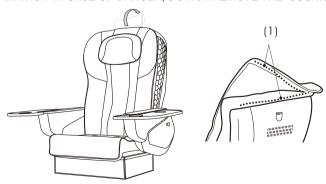




To Adjust The Back Simultaneously

Backrest adjustment


press and hold the $\,\dot{\mathbf{b}}\,$ button on the controller,the backrest will recline backward slowly. Release the button,then the backrest will be stopped upright press and hold the $\, \mathbf{v} \,$ button on the controller,the backrest will move slowly. Loose the button,then the backrest will be stopped.

WARNING: DO NOT EXERT ANY PRESSURE OTHER THAN YOUR OWN BODY ON THE BACK WHILE IT IS RISING.

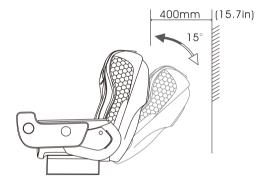


To Adjust Seat Frame Separately

The flex fuction of seat frame could fix the different height of the people to adjust the massage place of the calf airbags, the maximum distance moving forward and backward is 120mm.

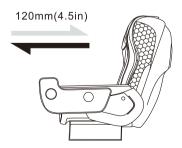



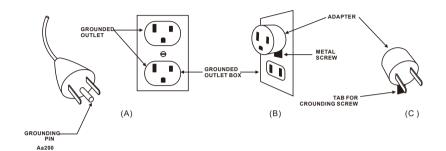

Product Specification

Model: 9690

Name: SPA Massage Chair Power Supply: 110-120V~ 60Hz

Rated Power: 70W Rated Current: 1.0A Safety structure: Class I



Manufacturer of Luxurious Pedicure Spas, High Quality Salon and Spa Furniture

Gulfstream Inc.

Cambridge, Ontario, Canada N1R 5X5

Tel.: 519-622-0950 Fax: 519-622-6926

www.gulfstreaminc.com

9690 Massage Chair®, Gulfstream Inc.® are trademarks of Gulfstream Inc.